


Manual Foam Soap Dispenser 1000ML * PCFD1000 Installation Instructions

Parts:


Dispenser (1)
Screws and Anchors (3)
Double Side Tape (3)
Instruction Sheet (1)

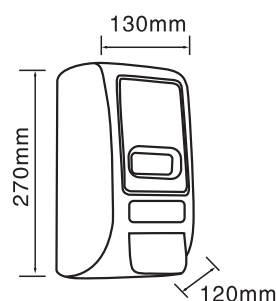

Latch

Tape Mounting:

1. Make sure mounting surface is flat, clean and dry. (Tape mounting is only recommended for mirrors or similar surfaces)
2. Remove protective backing from adhesive tapes and press dispenser firmly against the mounting surface for about 15 seconds. Open front cover and press directly for an additional 15 seconds and allow 8 hours before inserting the cartridge & using the dispenser.
3. To open dispenser: Push the latch up from the bottom of the dispenser and pull cover forward away from the wall or mirror.

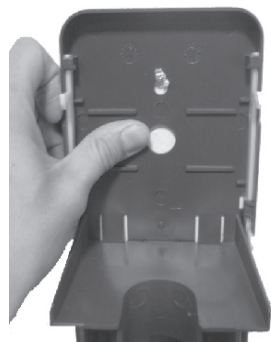

Screw Mounting:

1. Hold dispenser against wall in desired location, open cover and mark the holes through the backplate.
2. Install provided anchors into drywall and secure the dispenser with screws provided.


Cartridge Installation Instructions

Step 1:

Open Dispenser, push the latch up from the bottom of the dispenser and pull cover forward away from the wall or mirror.

Step 2:

Place the cartridge on the platform and insert the pump nozzle firmly in the guides

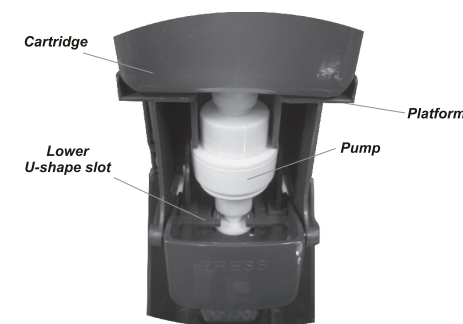

0.8ml output system

Step 3:

Close dispenser cover securely and ready to use.